INSTALLATION INSTRUCTIONS FOR LW78AS LOCK WASHER

Torque eyebolt nut first before applying lock washer. Lock washer must sit on top of the existing eyebolt washer.

Lock washer lip must sit inside the manway eyebolt slot and butt up against the side wall. This prevents the eyebolt nut from rotating counter clock wise.

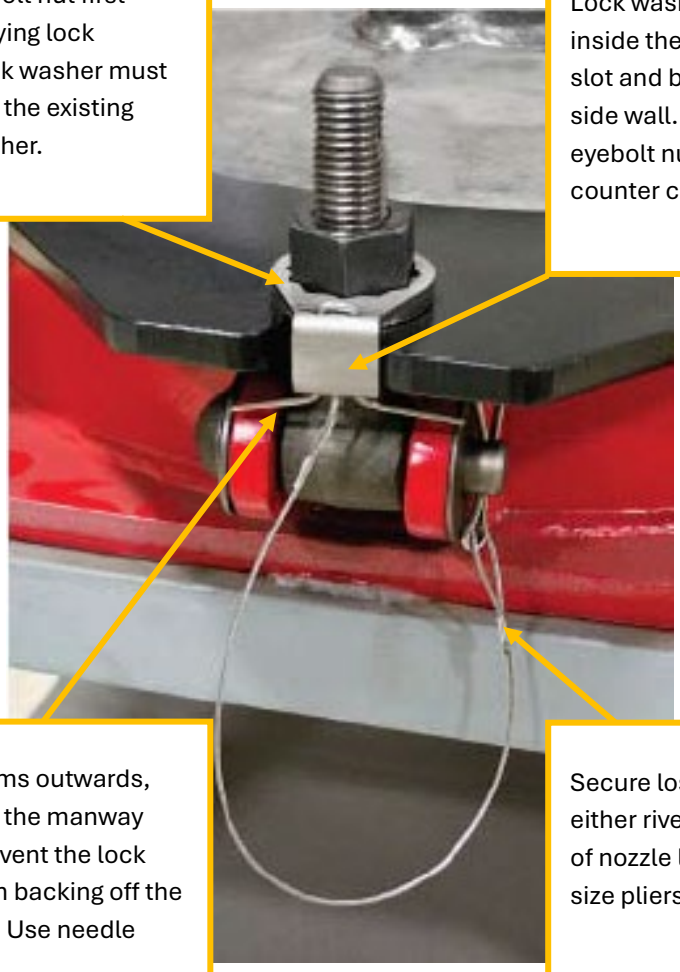

Bend pin arms outwards, underneath the manway cover to prevent the lock washer from backing off the eyebolt nut. Use needle pliers.

Secure lose cable end to either rivet assembly or one of nozzle lugs. Use medium size pliers for crimping.